

Sinotruk HOWO NX Hook Lift Truck Operation Guidance

1. Pull the brake, start the truck engine, waiting until the air pressure over 6-8 air pressure, press the clutch pedal, pull out the PTO Button and Make gear to 3~6, then the PTO is start to make truck working.




2. **Electric Control Box**—Recommend Control model (Equipped with limit valve for safety working) **Green Light working—Red Light Low Power**




- Button 1** Stop Button for POWER OFF
- Button 2** Start Button for POWER ON
- Button 3** Control the Main Arm Stretch Out (Lifting Up) for working
- Button 4** Control the Main Arm Retract Back (Falling Down) for not working
- Button 5** Control the Sliding Arm Stretch Out move to the front cabin position
- Button 6** Control the Sliding Arm Retract Back move to the rear position
- Button 7** Control the Horizontal Lock Stretch Out for unlock
- Button 8** Control the Horizontal Lock Retract Back for lock
- Button 9** Control the Outrigger Stretch Out for working
- Button 10** Control the Outrigger Retract Back for not working
- Button 11** Control the Rear Quick Connector Connect for working
- Button 12** Control the Rear Quick Connector Disconnect for not working

3. **Hydraulic Control Box**—When Electric Control Box not working

- Joystick 1**
 - RIGHT-- Control the Main Arm Stretch Out (Lifting Up) for working
 - LEFT--Control the Main Arm Retract Back (Falling Down) for not working
- Joystick 2**
 - RIGHT-- Control the Sliding Arm Stretch Out move to the front position
 - LEFT--Control the Sliding Arm Retract Back move to the rear position
- Joystick 3**
 - RIGHT-- Control the Horizontal Lock Stretch Out for unlock
 - LEFT-- Control the Horizontal Lock Retract Back for lock
- Joystick 4**
 - RIGHT-- Control the Outrigger Stretch Out for working
 - LEFT-- Control the Outrigger Retract Back for not working
- Joystick 5**
 - RIGHT-- Control the Rear Quick Connector Connect for working
 - LEFT-- Control the Rear Quick Connector Disconnect for not working

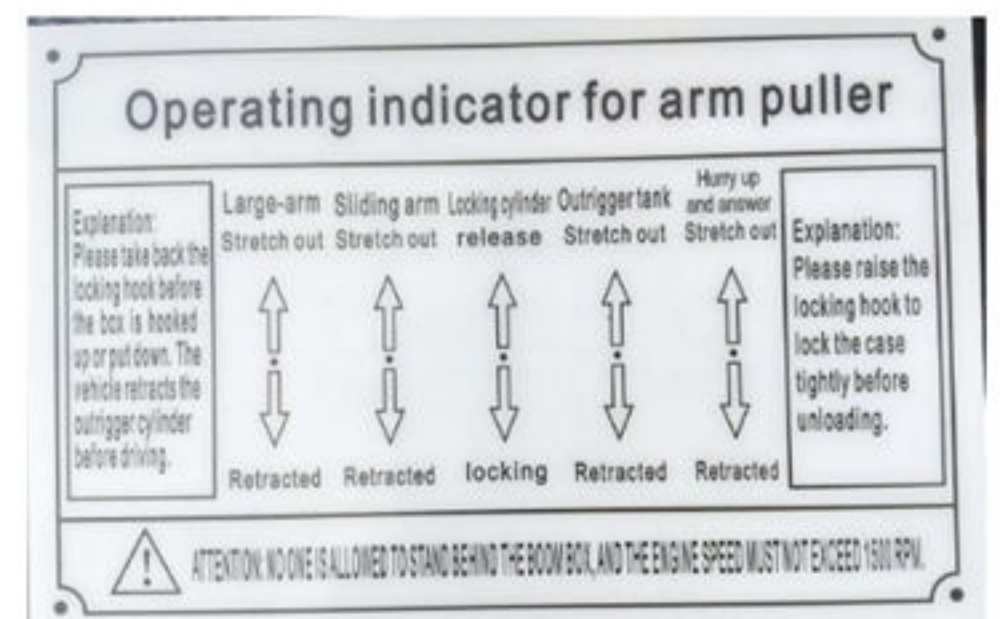

4. **Operation Guidance Step by step:**

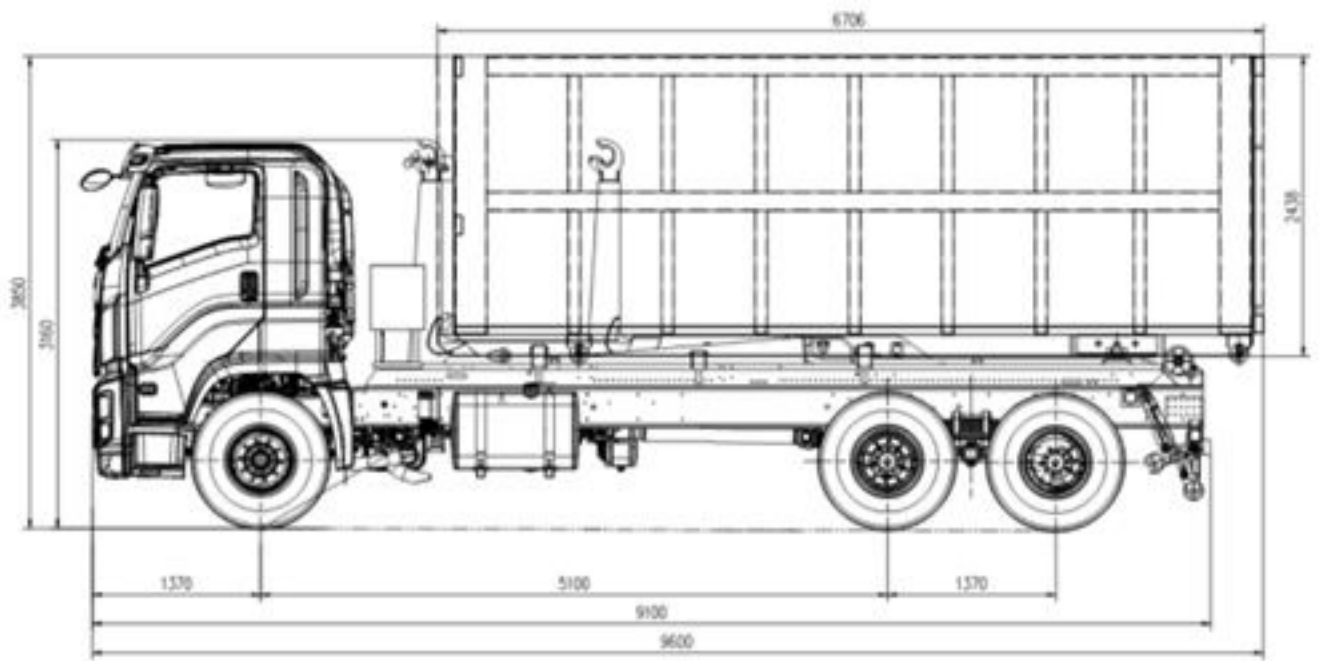

- 1 Make sure the PTO is engaged and ready for work.
- 2 **Wireless Electric Control Box need to Open button for operation. Hydraulic Control Box can operate directly.**
- 3 Press **Button 2** to make Wireless Electric Control Box available for operation
- 4 Press **Button 9** or Adjust **Joystick 4 RIGHT** to make rear hydraulic outrigger down to the ground to support the truck. Which can safety support the truck for loading and discharge process.
- 5 Press **Button 7** or Adjust **Joystick 3 RIGHT** to make horizontal lock stretched out for unlock.
- 6 Press **Button 6** or Adjust **Joystick 2 LEFT** to make sliding arm move back to the rear position.
- 7 Press **Button 3** or Adjust **Joystick 1 RIGHT** to make main hook arm lifting up ready for lifting.
- 8 **Above steps can have the garbage container ready for loading, below steps showing how it lifting up**
- 9 Press **Button 4** or Adjust **Joystick 1 LEFT** to make main hook arm falling down back to the truck.
- 10 Press **Button 5** or Adjust **Joystick 2 RIGHT** to make sliding arm move forward to the front cabin position.
- 11 Press **Button 8** or Adjust **Joystick 3 LEFT** to make horizontal lock retract back for lock.
- 12 Press **Button 10** or Adjust **Joystick 4 LEFT** to make rear hydraulic outrigger up to the original position.
- 13 **Two models for discharge garbage can be optional as below:**

14 **Model 1—Working as Dump Truck:** Open 4 sets bin lock, press **Button 9** or Adjust **Joystick 4 RIGHT** to make rear legs standing, not operate **Button 5&6&7&8** or **Joystick 2&3**, press **Button 3** or adjust **Joystick 1 RIGHT** to make main hook arm lifting up. Then can lifting up the garbage bin, and the bin fixed on the arm, as below picture showing.

15 **Model 2—Discharge the Garbage Bin:** Close 4 sets bin lock, press **Button 9** or Adjust **Joystick 4 LEFT** to make rear legs standing, press **Button 7** or adjust **Joystick 3 RIGHT** to make horizontal lock unlocked, press **Button 6** or adjust **Joystick 2 LEFT** to make sliding arm move back, press **Button 3** or adjust **Joystick 1 LEFT** to make main hook arm lifting up. Then can lifting up the garbage bin and dispatch bin down to the ground. As below picture showing

- 16 Press **Button 2** to make the Wireless Electric Control Box off work



Model 1 as Dump Truck



Model 2 to Discharge Garbage Bins

5. 24 hours technical support: 0086 155 7227 0555

**CS TRUCKS
FOR YOUR SUCCESS**